


- NOTE
- 1 WHEN ASSEMBLING SCREWLOCKS, SUPPLIED WITH 'D' CONNECTORS THROUGH REAR PANEL. DISCARD ALL WASHERS SUPPLIED AND REPLACE WITH WASHER, ITEM 27, 2 OFF PER 'D' CONNECTOR.
 - 2 ENSURE THAT ITEM 29 IS POSITIONED IN ORIENTATION SHOWN, & THAT 20mm OF EXTERNAL CABLE INSULATION PROTRUDES INTO METAL CASE & POSN. M3 FASTON VERTICALLY UP FROM STUD.
 - 3 ENSURE THAT LIVE/NEUTRAL WIRES ARE ROUTED WELL AWAY FROM CASE METALWORK & TRANSFORMER LAMINATIONS.

7	ECO 3021/3043	RS	FX
6	ECO 3008	RS	FX
5	ECO 2996	RS	FX
4	ECO 2969	RS	FX
3	ECO 2904	ROG	FX
2	ECO 2847	RS	FX
1	AMR 3040	RS	
A		RS	
ISS	DATE	DESC. OF CHANGE	DRN. CHKD.

SCALE	1:1	ALL DIMENSIONS IN mm UNLESS OTHERWISE STATED
MATERIAL	SEE 0094, 000/P	
FINISH		
HOLE No. TOL.	DECIMAL No. TOL.	ANGLE TOL.

Copyright of this drawing is reserved by ACORN COMPUTERS LTD. It is issued on condition that it is not copied, reproduced or disclosed to a third party, either wholly or in part, without the consent in writing of ACORN COMPUTERS LTD.

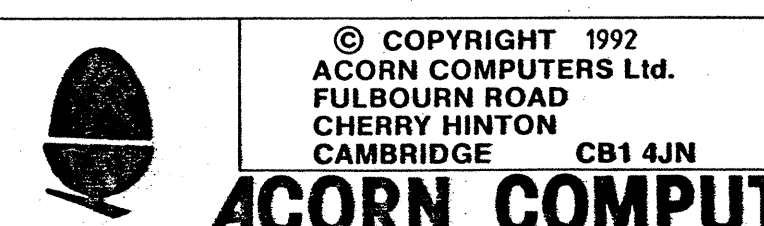

TITLE
A3010
FINAL ASSEMBLY