


- NOTE:-
- 1] SHUNTS ITEM 10 FITTED TO LINKS LK6,31,32. IN POSITIONS SHOWN THUS.
 - 2] ALL CONNECTORS[SK, PL, LK, IC SOCKETS] TO BE MOUNTED FLUSH AND PERPENDICULAR TO THE PCB.
 - 3] UNLESS OTHERWISE SHOWN, ALL RADIAL LEADED COMPONENTS TO BE MOUNTED PERPENDICULAR TO THE PCB TO WITHIN +/-15 °.
 - 4] ENSURE REAR PANEL ITEM 7 IS AT 90 ° TO THE PCB, AFTER ASSEMBLY.
 - 5] USE WIRE ITEM 16 TO HOLD DOWN CRYSTALS X2,X7. DO NOT SOLDER WIRE TO CAN.
 - 6] WHEN ASSEMBLING SCREWLOCKS SUPPLIED WITH 'D' TYPE CONNECTORS DISCARD ALL WASHERS SUPPLIED AND REPLACE WITH WASHER ITEM 14, 2 OFF PER CONNECTOR.
 - 7] FIT CRYSTAL INSULATION WASHER ITEM 12 BETWEEN X5 AND PCB.

2	03/08/92	ECO 2970	BGH
1	17/07/92	AMR 3250	BGH
ISS	DATE	DESC.OF CHANGE	DRN

SCALE	ALL DIMENSIONS IN MM UNLESS OTHERWISE STATED
MATERIAL	SEE PARTS LIST.
FINISH	SEE PARTS LIST.
WHOLE No.TOL	+/-1MM
DECIMAL No.TOL	
ANGLE TOL.	

COPYRIGHT OF THIS DRAWING IS RESERVED BY ACORN COMPUTERS LTD. IT IS ISSUED ON CONDITION THAT IT IS NOT COPIED, REPRODUCED OR DISCLOSED TO A THIRD PARTY, EITHER WHOLLY OR IN PART, WITHOUT THE CONSENT IN WRITING OF :-
ACORN COMPUTERS LTD.

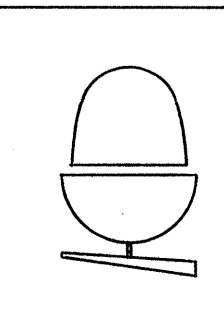

© COPYRIGHT 1992
ACORN COMPUTERS LTD
FULBOURN ROAD
CHERRY HINTON
CAMBRIDGE
CB1 4JN

TITLE
MAIN PCB ASSEMBLY